



Sony Xperia Z1 Compact Screen Replacement

Written By: jaanparker





TOOLS:

- [Heat Gun](#) (1)
- [iFixit Opening Tools](#) (1)
- [Suction Handle](#) (1)



PARTS:

- [Sony Xperia Z1 Compact Display Adhesive Strips](#) (1)

Step 1 — Apply heat




- Apply heat to the edges.

Step 2 — Start prying




- When the glue is warm slowly start prying from the top corner.

Step 3 — Add more heat if necessary

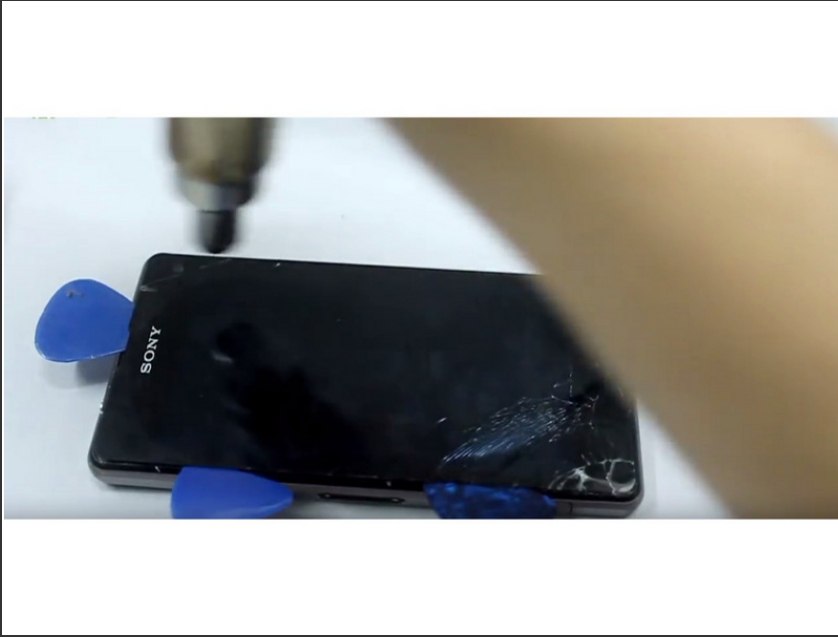

- If the glue is cooled down heat more. Don't force it.

Step 4 — Cable

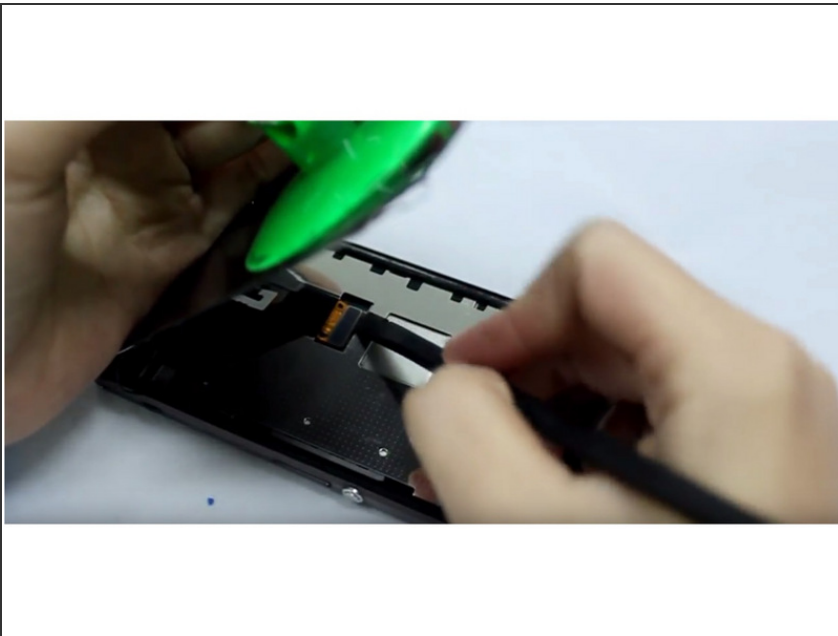

- Remove the data cable from the phones body.

Step 5 — Testing new screen




- Test if the new screen works properly.

Step 6 — The tape



- If the screen works, remove the new screen and add the double sided tape

Step 7 — Connecting new screen

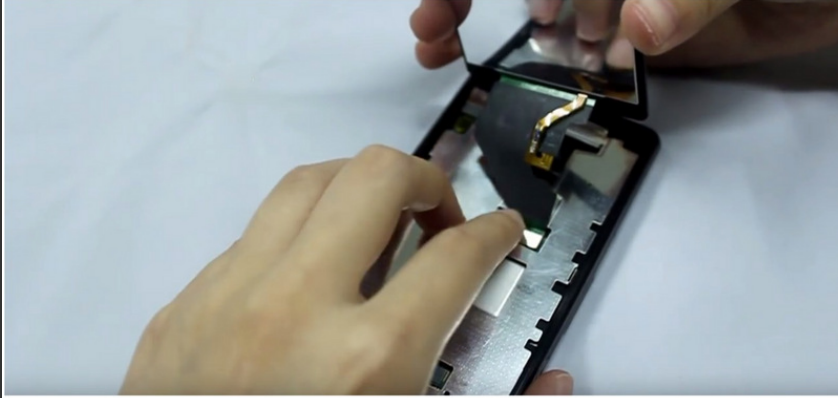

- Connect the new screen to the phone.

Step 8 — Apply force



- Now push town not to tight not to softly to the screen.
- And that's it. You finished the screen replacement.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 07:08:15 PM.